


Security keypad instruction

Инструкция по использованию панели управления охранной системы

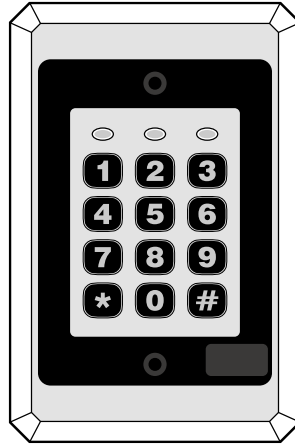

Alarm switch on

To switch on alarm enter 2-figured or 4-figured Code and press “*” button. There is a 17 seconds signal during which Tenant must leave the office, then the system becomes alarmed.

When the system is alarmed, any door opening sets an alarm. In case within 17 seconds the alarm system is not deactivated, alarm signal is transmitted to the security service of the building.

Alarm deactivation

When entering alarmed premises, there is a sounding signal. It is necessary to deactivate alarm within 17 seconds. One should enter the Code and press “*” button.

Change the Master Code

99# Master Code * 1 # new Master Code *
new Master Code *
Change code
99# Master Code*60# 0 # 2 # new code * new code *

Attention

1. If a wrong code is entered, press “#”
2. If a mistake is made when changing the code, press “*” to start from the beginning
3. If a wrong code is entered 3 times in a row, the keypad is automatically blocked for 10 seconds

Постановка офиса под охрану

Для постановки под охрану введите 2-х или 4-х Код и нажмите кнопку «*». В течение 17 секунд раздается звуковой сигнал, во время которого Арендатор должен покинуть помещение офиса, затем система переходит в режим охраны.

В период, когда помещение офиса находится под охраной, любое открытие дверей приводит к тревоге. Если в течение 17 секунд система не будет снята с охраны, сигнал тревоги поступит в службу охраны здания.

Снятие системы с охраны

При входе во взятое под охрану помещение раздается звуковой сигнал. Снятие системы с охраны должно быть произведено в течение 17 секунд. Для этого следует ввести Код и нажать кнопку «*».

Изменение мастер кода

99# Мастер Код * 1 # новый
Мастер Код * новый Мастер Код *
Изменение кода
99# Мастер Код * 60# 0 # 2 # новый код * новый код *

Внимание

1. При неправильном вводе кода, нажмите «#»
2. В момент изменения кода, если допустили ошибку, нажмите «*» для возврата операции в начало
3. Если Вы 3 раза подряд неправильно ввели код, клавиатура автоматически блокируется на 10 секунд